
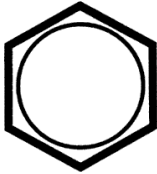


Anziehvorschrift für Zylinderkopf		180.180	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Fiat	Das Original



760.720
M 9 x 96

⑧	⑥	②	⑤	⑩
⑦	③	①	④	⑨

Anziehen/ Tightening/ Serrage/ Apriete	156C.046 176A6.000 176B2.000 (Punto)	160A3.000 176B2.000 156C.046(Y10 89-95)
* 20 Nm ➤ 30 Nm ➤ 90° ➤ 90°	* 30 Nm ➤ 90° ➤ 90°	

Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor	
÷ 1,95 mm, Ø 71 mm	
Tipo, Uno, Y10 1,1 Ltr.	ab 1988>
Panda, Punto 1,1 Ltr.	ab 1991>
Cinquecento 1,1 Ltr.	ab 1994>1998
Seicento 1,1 Ltr.	ab 1998>2000
Mot. 176B2.000, 156C.046, 176A6.000,	

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*180.180*
--	------------------